

KEY LOCK INSTALLATION INSTRUCTIONS

 
The installation and servicing of the equipment should be done by qualified experienced technicians.

The Key Lock kit prevents tampering of the controls used to set temperatures and heating or cooling functions.



CAUTION PERSONAL RISK HAZARD



Underwriter's Laboratories Inc. listed. For institutional use only where supervisory monitoring is available. Any other use may increase the risk of personal injury or property damage.

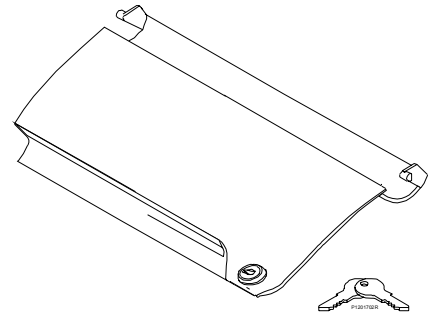

Key Lock Assembly

Installation Instructions

  1. Remove front from unit by pulling bottom out and then lifting upward.
2. Loosen retaining screw by one-turn counter-clockwise. Disengage door pins from housing slots and remove door.
3. Insert the key lock assembly in the housing slots. Tighten retaining screw one-turn clockwise. Do not overtighten.

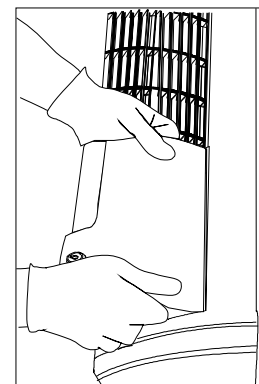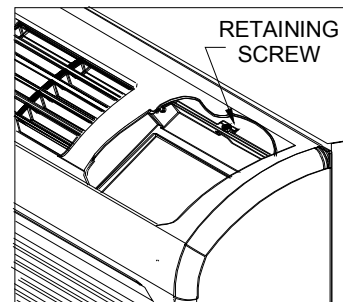

PTAC DIRECT SALES, INC.

185 S. Kimball Ave., Suite 130
Southlake, TX 76092

877.454.7822 (T)

Due to policy of continual product improvement, the right is reserved to change specifications and design without notice.