



Friedrich WRT2 - Programmable Thermostat Installation and Operation Manual

[Manuals](#) / [Brands](#) / [Friedrich Manuals](#) / [Thermostat](#) / [WRT2](#) / [User manual](#) / PDF

Contents

PTAC DIRECT SALES, INC.
185 S. KIMBALL AVE., SUITE 130
SOUTHLAKE, TX 76092
877.454.7822
www.PTACdirect.com

1. Introduction
2. Parts Diagram
 - 2.1. Transmitter
 - 2.2. Receiver
3. Included in Package
4. Installer Button Codes
5. Specifications
6. Safety Information
7. Installing the Thermostat
 - 7.1. Mount Receiver Unit
 - 7.2. Pair Transmitter and Receiver Unit
 - 7.3. Mount Transmitter Unit
 - 7.4. WIRING DIAGRAM: Heat Pump
 - 7.5. WIRING DIAGRAM: Heat - Cool
 - 7.6. RF PAIRING
8. INSTALLER SETTINGS
 - 8.1. HOW TO ENTER

8.2. HOW TO NAVIGATE

8.3. HOW TO EXIT

9. NORMAL OPERATION

9.1. CHANGING MODE

9.2. CHANGING SET TEMPERATURE

9.3. CHANGING FAN SPEED

9.4. SETTING A KEYPAD / FRONT PANEL LOCKOUT

9.5. SET CLOCK AND TEMPERATURE PROGRAM SCHEDULE

9.6. ADJUSTING THE REAL-TIME CLOCK

9.7. ADJUSTING THE HEAT OR COOL TEMPERATURE PROGRAM

9.8. ENTERING EMERGENCY HEAT MODE (HP UNITS ONLY)

10. Documents / Resources

10.1. References

10.2. In Other Languages

10.3. Other ManualsLib Projects





Introduction

The Friedrich WRT2 is a programmable, wireless electronic thermostat, which can be used with the following heating/cooling applications:


- **Single Stage Heat - Cool PTAC Units**
- **Single Stage Heat Pump PTAC Units with or without Electric Heat**

Parts Diagram

Transmitter

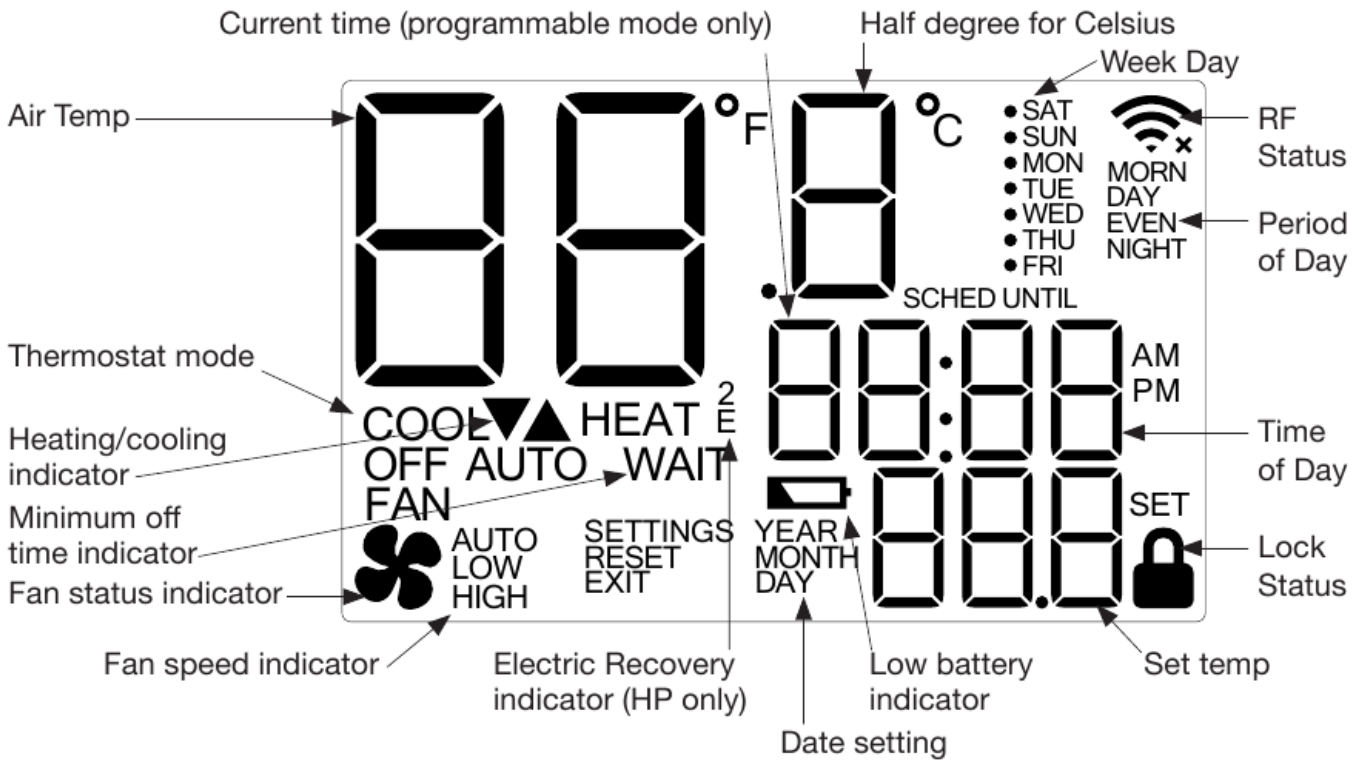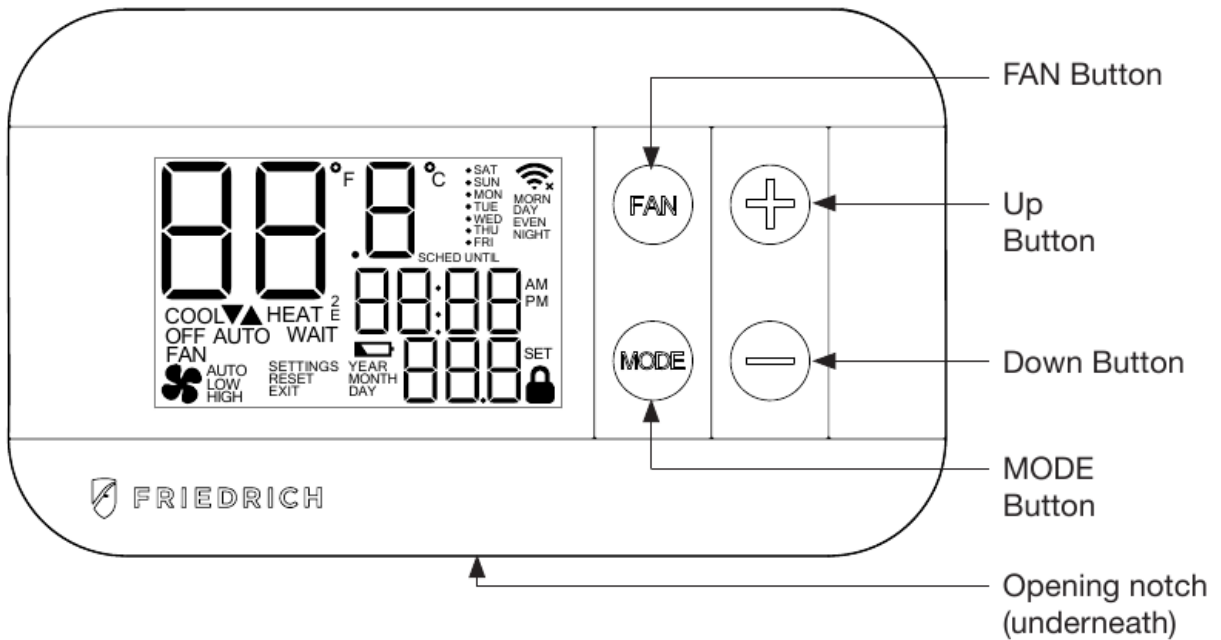

Receiver

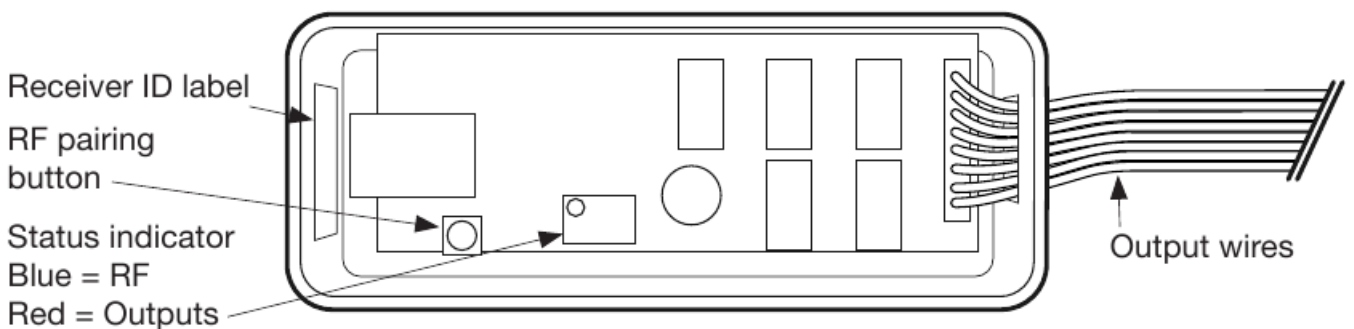

Included in Package

- Thermostat transmitter
- Thermostat receiver
- Dry wall anchors and mounting screws
- 2 AA batteries

Installer Button Codes

Function	Thermostat Mode	Key combination / method
Installer menu	OFF mode	UP + FAN for 5s
Set time and program (installer menu 13 must be set to ON)	OFF mode	UP + MODE for 5s
Toggle Keypad lock/unlock	HEAT / COOL mode	UP + FAN for 5s
Toggle EMER HEAT	HEAT mode	DOWN + MODE for 5s
Start RF pairing	OFF mode	DOWN + FAN for 10s

Specifications

- Input Voltage: 19 to 30 VAC
- Output Rating: Max. 1.5A per output wire (3A total)
- Temperature Control: 60°F to 90°F (16°C to 32°C)

Safety Information


- This thermostat is for LOW voltage applications only.
- Turn OFF electricity to all heating and cooling components.
- All wiring must conform to applicable local and national building and electrical codes and ordinances.

Installing the Thermostat


- The WRT2 thermostat comes in two parts: a receiver unit that is wired to the PTAC unit and a transmitter unit that is installed on the wall and wirelessly communicates with the receiver unit.

Mount Receiver Unit

- Remove the cover from the front of the PTAC unit.

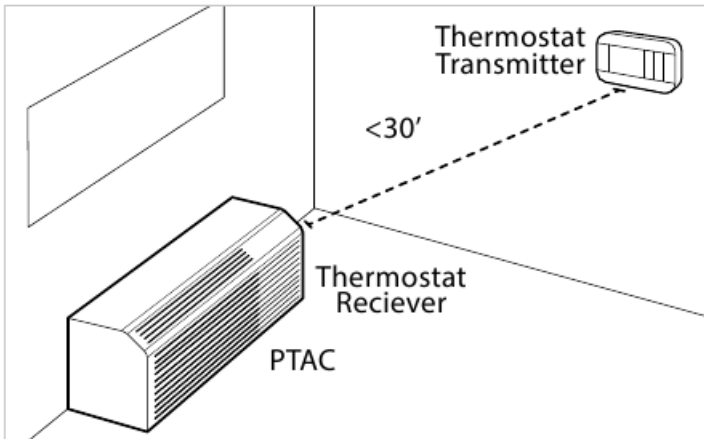

- Mount the receiver unit using the double-sided tape provided in the location above.
- Using the WIRING DIAGRAMS section, wire each output wire into the PTAC terminal block. Ensure that the bare end is fully seated into the connector then tighten securely. Pull gently on wires to ensure they are secure.

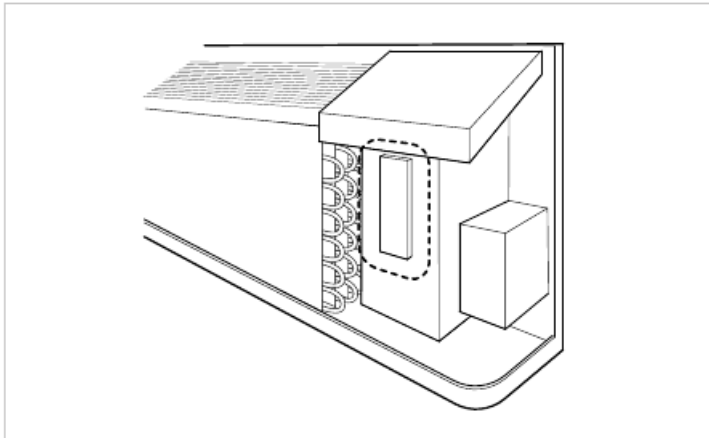

Pair Transmitter and Receiver Unit

- Turn on power to PTAC unit.
- Use a flat head screw driver to separate the front and back housing of the transmitter.
- Take transmitter close to the expected install location.
- Within 10 minutes of returning power to the PTAC unit, insert 2xAA brand name alkaline batteries (included) into the thermostat transmitter.

i IMPORTANT INFORMATION **i**

Alkaline batteries must be replaced once every 2 years regardless of battery level. Failure to replace batteries can lead to battery acid leakage and product failure.



- When display says 'YES' press MODE.




- If only 1 receiver has been powered up within 60 feet of the thermostat transmitter within the last 10 minutes, then when this page is displayed press MODE.
- If multiple receivers have been powered up nearby recently or if you do not see the screen on the left, please see the RF PAIRING section for more details.
- Ensure that heat and cool operates correctly. Once you have confirmed operation, cut or tape-off any unused output wires coming from the receiver and replace the PTAC cover.




Mount Transmitter Unit

- Mount the thermostat transmitter on an inside wall about five feet above the floor in an area that has good circulation but is not directly affected by a vent or duct.
- Pair the transmitter and receiver, and check RF connection in desired location prior to mounting the transmitter on wall.
- Mark the placement of the new mounting holes through the thermostat base. Using a 3/16" drill bit, drill the holes you have marked and insert the supplied wall anchors.
- Use supplied screws to mount base to the wall.
- Return the thermostat front cabinet to its base by hooking the top first and then gently swinging the bottom of the thermostat into place.

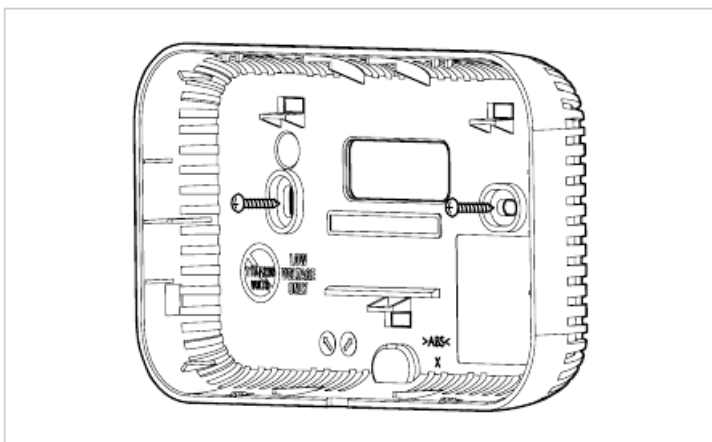

WIRING DIAGRAM: Heat Pump

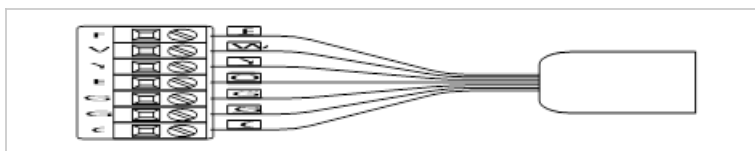

Note 1: Make the following Installer Settings for Heat Pump units


System Type	Changeover valve type	Required action
Heat Pump	B	1. Set Installer Settings Menu #06 to HP
	O	1. Set Installer Settings Menu #06 to HP 2. Set Installer Settings Menu #07 to O

Note 2: When configured for Heat Pump operation, the "Y" wire will be energized for during both cooling and first-stage heating operation. Do not connect the "W1" wire to any terminal.

Note 3: The "W2" wire is used to call for Electric/ Auxiliary heat. If your Heat Pump PTAC does not have Electric heat, then the "W2" wire should not be used and Installer Settings menu 10 (Aux. Stage Offset) should be set to "OFF".

Note 4: For PTAC units with only one fan speed (single "G" fan terminal), use the "GL" wire for wiring and Installer Settings menu 12 (High Fan) must be set to "OFF".

WIRING DIAGRAM: Heat - Cool

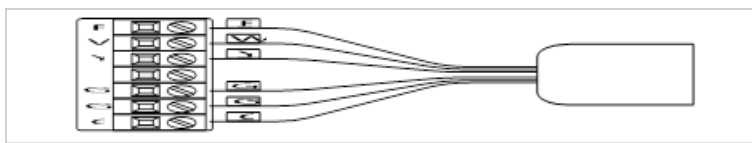


Note 1: If connecting to a Cool only PTAC unit, the W1 and W2 wires will not be used and Installer Settings menu 03 (Available Modes) should be set to "04: Cool Only"

Note 2: For PTAC units with only one fan speed (single "G" fan terminal), use the "GL" wire for wiring and Installer Settings menu Item 12 (High Fan) must be set to "OFF".

RF PAIRING

- The RF icon in the top right corner of the LCD shows the RF connection state between transmitter and receiver.
 - **BLANK:** No receiver paired
 - **SOLID:** Transmitter and receiver connected
 - **FLASHING:** Receiver paired but disconnected
- When you first power up a transmitter and receiver they will be in pairing mode for 10 minutes. If you need to start the pairing process after this timeframe, follow these steps:
 1. At the Receiver, use a small flat head screw driver to open the grey front cover. Hold down the RF Pairing button for 5 seconds until the Blue RF indicator LED starts to flash.
 2. At the Transmitter put thermostat in OFF mode and hold FAN and DOWN buttons for 10 seconds.
 3. When the screen says 'YES' press the MODE button to start scanning process.

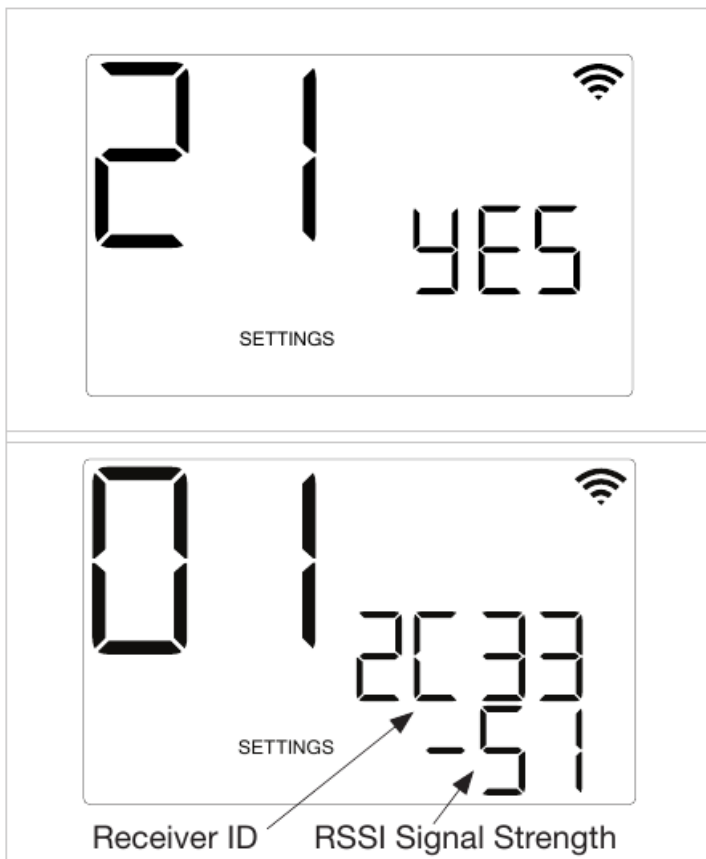

4. After scanning, the display will show the ID and RSSI signal strength of any receivers it has found. Match the receiver ID with the label found inside the receiver housing near to the RF Pairing button. If more than 1 receiver has been found, use the UP and DOWN buttons to select the desired Receiver. Press MODE to confirm selection or press FAN to go back.
 5. If needed, steps 3 & 4 may be repeated to check signal strength in different locations. A signal strength between 40 and 70 is recommended. A signal strength between 85 and 100 may lead to connectivity problems.
- If the thermostat is experiencing connectivity issues or you find a signal strength of 85 to 100 during pairing, please try the following:
 - Move the transmitter closer to the PTAC
 - Re-orientate the receiver within the PTAC
 - Place the receiver outside of the PTAC

INSTALLER SETTINGS

HOW TO ENTER

- Set thermostat to **OFF** mode
- Hold **UP + FAN** for 5 seconds

HOW TO NAVIGATE

- Press **UP** or **DOWN** to change setting value
- Press **MODE** to save setting value and proceed to next setting option
- Press **FAN** to return to previous setting option

HOW TO EXIT

- Press **MODE** until last setting page (99) has been saved or leave thermostat with no button press for 60 seconds
- Note: You must press **MODE** to save each setting value

Menu Number	Function Description	User Option Number	Default setting
01	Temperature Scale	F : Fahrenheit C : Celsius	F
02	Temperature Calibration	+/- 5.4°F	0.0°F
03	Available modes	01: Heat and Cool with auto 02: Heat and Cool without auto 03: Heat only 04: Cool only	01
04	Max Heat Set Temp	F : 60 to 90 (5°F step)	80°F
05	Min Cool Set Temp	F : 60 to 80 (5°F step)	65°F
06	PTAC Type	H-C : Heat-Cool HP : Heat Pump	H-C
07	HP valve type	B : B Valve O : O Valve	B
08	Auto dead-band between heat and cool operation in AUTO mode	2 to 5°F (1°F step)	4°F
09	Stage 1 Temperature Control Swing	±0.25°F ±0.50°F ±1.00°F ±2.25°F	0.50°F
10	Auxiliary Stage Cut-In Offset (only used for HP system type)	OFF (No Electric / Auxiliary heat) -3.0 to -8.0°F (1°F step)	-4.0°F
11	(Not Used)		
12	High FAN availability	ON : High fan available OFF : High fan not available	ON
13	Programming mode	OFF : Manual ON : Programmable	OFF
14	Clock Format (Programming mode)	12: 12 hour 24: 24 hour	12

	only)		
15	Periods per day (Programming mode only)	4: 4 periods per day 2: 2 periods per day 1: 1 period per day	2
16	Auto Daylight Savings (Programming mode only)	ON: Auto DST on OFF: Auto DST off	ON
17	(Not Used)		
18	Reset to default set temperatures after each mode change (manual mode only)	ON: uses default temperatures after each mode change (see menu 19 and 20) OFF: Maintain last set temperature for each mode	ON
19	Default heat mode set temperature (manual mode only)	60°F to Max Heat Set Temp	70°F
20	Default cool mode set temperature (manual mode only)	Min Cool Set Temp to 80°F	74°F
21	Start RF Pairing	NO: no action YES: start RF pairing DEL: delete the current receiver INFO: show RF status for receiver	NO
98	Minimum off time - Compressor protection	NO: Immediate off/ on switching YES: 3-minute minimum off time enforced	NO
99	Reset	NO: no reset YES: ex-factory reset	NO

NORMAL OPERATION

CHANGING MODE

- Press **MODE** button to initiate mode selection menu
- Press **MODE** button until desired system mode is blinking. After 2 seconds of no button press desired mode is selected

CHANGING SET TEMPERATURE

- Ensure thermostat is in correct system mode (Heat, Cool or Auto)
- Press **UP** or **DOWN** button. New set temperature will be displayed in large digits. After 2 seconds of no button press new set temperature is selected

- If Programming mode is **OFF**, then new set temperature will be held indefinitely. If programming mode is **ON** (see below), then new set temperature will be held until next scheduled set-point change

CHANGING FAN SPEED

- Press **FAN** button to initiate fan speed selection menu
- Press **FAN** until desired fan mode is selected. After 2 seconds of no button press desired fan mode is selected
 - **AUTO**: fan operates as needed during a call for heating or cooling activation only.
 - **LOW**: fan operates continuously in low speed. Heat/Cool will turn on/off in background as needed.
 - **HIGH**: fan operates continuously in high speed. Heat/Cool will turn on/off in background as needed.

SETTING A KEYPAD / FRONT PANEL LOCKOUT

- While in any normal operating mode except **OFF**, a keypad lockout can be introduced which will prevent any mode change, fan change or temperature adjustment from being made by the user. Even when locked, any button press will illuminate the display backlight.
- To activate (and deactivate) the keypad lockout, set thermostat to heat, cool or auto mode then hold **FAN + UP** buttons for 5 seconds. When the keypad is locked, a padlock will appear in the lower left corner of the display.

SET CLOCK AND TEMPERATURE PROGRAM SCHEDULE

- **NOTE**: After 60 seconds with no button presses thermostat will exit the settings menu
- Set thermostat to **OFF** mode and hold **MODE + UP** buttons for 5 seconds. From this point you have the following options • Set thermostat real-time clock
- Set a heat schedule
- Set a cool schedule
- Use **UP** or **DOWN** buttons until desired section is blinking. Press **MODE** to enter selection.
- To exit press **FAN** or select "Exit" and press **MODE**

ADJUSTING THE REAL-TIME CLOCK

- Once the real-time clock menu has been selected use the **UP** or **DOWN** buttons to set each variable. **MODE** will save value and proceed to next variable. **FAN** will return to prior variable.
- By default, the thermostat will automatically adjust the clock for Daylight Savings. This can be disabled by changing the Auto Daylight Savings (setting 16) option in the installer menu

ADJUSTING THE HEAT OR COOL TEMPERATURE PROGRAM

- **NOTE:** Each period ends at the start time of the next upcoming period.
- **NOTE:** If configured to use only 2 periods, only **DAY** and **NIGHT** will be used, and the **MORN** and **EVEN** periods will not be used or visible. If you use 1 period and 7 day programming, then thermostat will reset to the desired set temperature at the same time each day.
- Once either **HEAT** or **COOL** programming sections has been selected, choose which day[s] to schedule together (i.e. all weekdays together, or each day separately). Use the **UP** or **DOWN** buttons to scroll through the blinking days and press the **MODE** to select each day with a indicator dot. Press **FAN** to deselect any previously selected day. Once all desired days are selected, move blinking selection to "**SCHED**" and press the **MODE** button to proceed.
- Adjust the start time of the first period using **UP** or **DOWN** buttons and press the **MODE** button. Press the **UP** or **DOWN** buttons to set the desired temperature for the first period. Press the **MODE** button to continue to the next period.
- Repeat until all periods have been set. Thermostat will return to day selection page.
- If all desired days have been scheduled select "**EXIT**" and press **MODE**. Otherwise use the **UP** and **DOWN** buttons to move blinking selection to desired days and press **MODE** to select day[s] for scheduling.

ENTERING EMERGENCY HEAT MODE (HP UNITS ONLY)

- While in **HEAT** mode, press **DOWN + MODE** for 5 seconds. The thermostat will show **HEAT** with "E" to confirm Emergency Heat mode. This will use only the W2 wire as the heating source and will not call for compressor heating.
- To return to normal heating mode, set thermostat to **HEAT** mode, press and hold **BOTH** the **MODE** and **DOWN** buttons for at least 5 seconds until the screen changes. The "E" will disappear and only show "HEAT" to confirm regular Heat mode.

Friedrich Air Conditioning Co.
10001 Reunion PI Suite 500,
San Antonio, TX 78216 1-877-599-5665
www.friedrich.com



Documents / Resources

References

[Room Air Conditioning Expert-Premium AC | Friedrich Air Conditioning](#)

Available languages

[Deutsch](#) [Français](#) [Español](#) [Mexicano](#) [Dutch](#) [Italiano](#) [Dansk](#) [Norsk](#)
[Polski](#) [Suomi](#) [Português](#) [Español \(Latinoamérica\)](#) [Русский](#) [Български](#)
[Čeština](#) [ελληνικά](#) [English \(UK\)](#) [Eesti](#) [Hrvatski](#) [Magyar](#)
[Bahasa indonesia](#) [Қазақша](#) [Lietuvių](#) [Português \(Brasil\)](#) [Română](#)
[Română \(Moldova\)](#) [Slovenčina](#) [Slovenščina](#) [Shqip](#) [Kiswahili](#) [Türkçe](#)
[O'zbekcha](#)

Other ManualsLib Projects

www.manualslib.com
www.manualslib.de
www.manualslib.es
www.manualslib.fr
www.manualslib.nl
www.manualslib.mx
www.manualslib.tech 30+ languages