

PTAC LEVELING LEGS KIT (LL2B) INSTALLATION INSTRUCTIONS

PTAC DIRECT SALES, INC.

185 S. Kimball Ave., Suite 130
Southlake, TX 76092



877.454.7822 (T)

Description

Leveling legs are designed to provide extra front support and leveling of the wall sleeve. Two leg assemblies are required per unit and are provided in each kit. Four screws are also provided with each kit for attachment to the wall sleeve. See Figure 1.

The leveling legs must be installed before the chassis is installed, but after the wall sleeve is in place. Holes must be drilled in each side of the wall sleeve, below the duct package holes, for attachment to the wall sleeve.

The installation and servicing of the equipment referred to in this booklet should be done by qualified, experienced technicians.

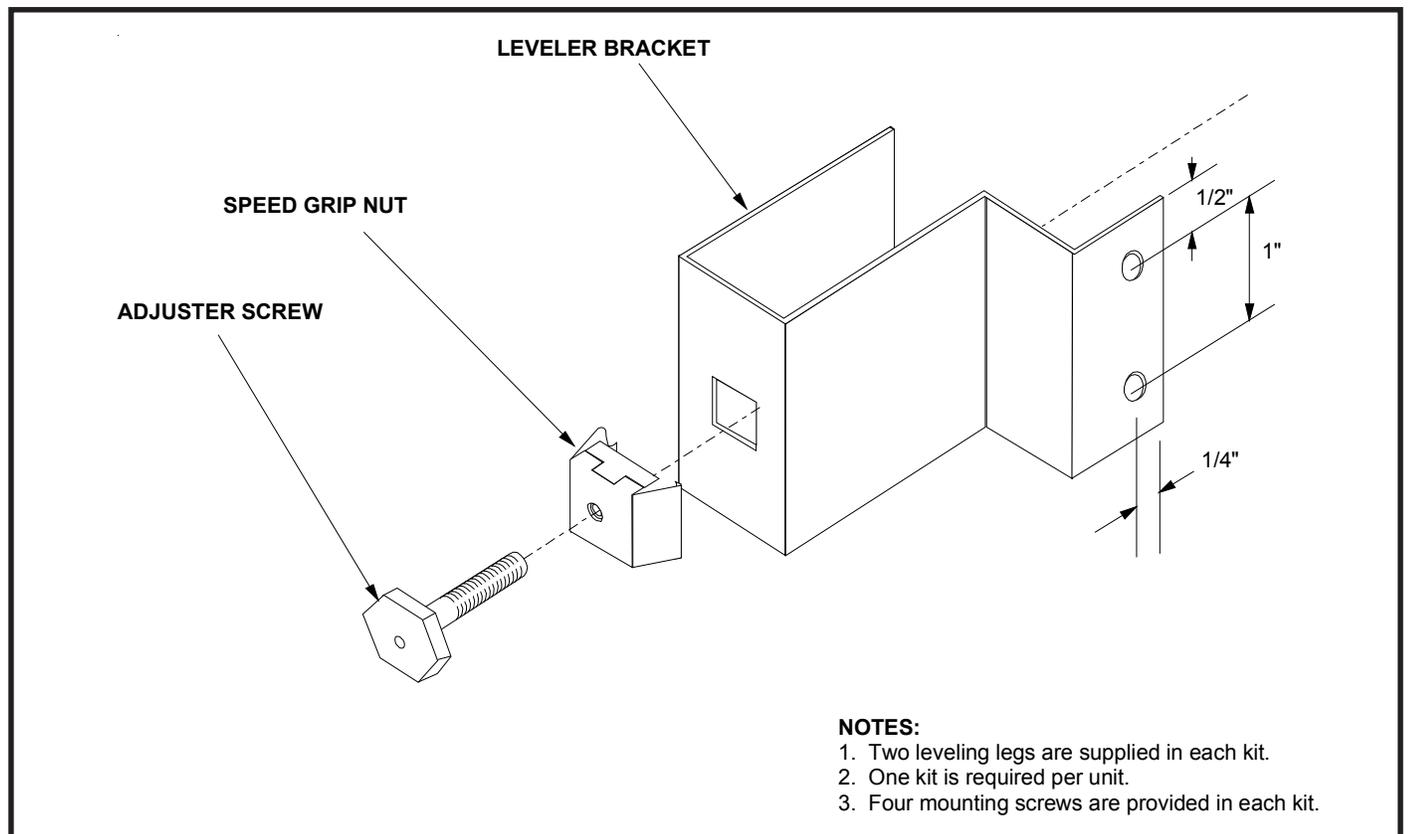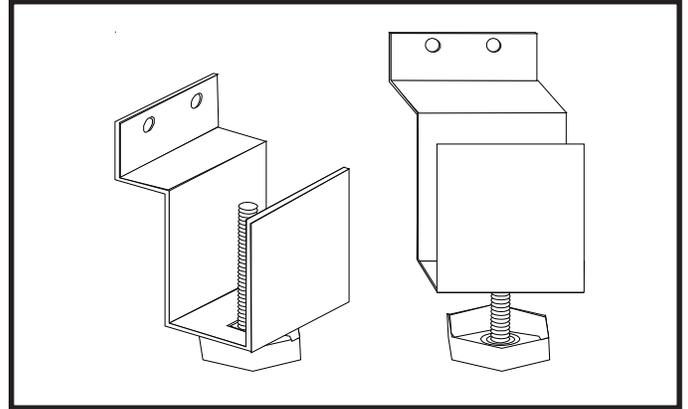

INSTALLATION


The installation and servicing of the equipment referred to in this booklet should be done by qualified, experienced technicians.

To install the leveling leg assembly, complete the following:

1. Drill two 1/8-inch holes in each side of the wall sleeve, as shown in Figure 2, using the leveling leg assembly as a template. Locations near the front of the sleeve provide more support.
2. Adjust the leveling legs to the approximate height needed (minimum 3 inches) and install them on either side of the wall sleeve, using the screws provided.

Bottom of wall sleeve can be anywhere from three (3) to five (5) inches above the screw base. Caulk around screws to prevent water leaks.

3. Level the sleeve horizontally from side-to-side. Provide a slight slope (one-quarter bubble in the sight glass) toward the outside. Check the level again after the unit has been installed. Adjust the legs as needed.

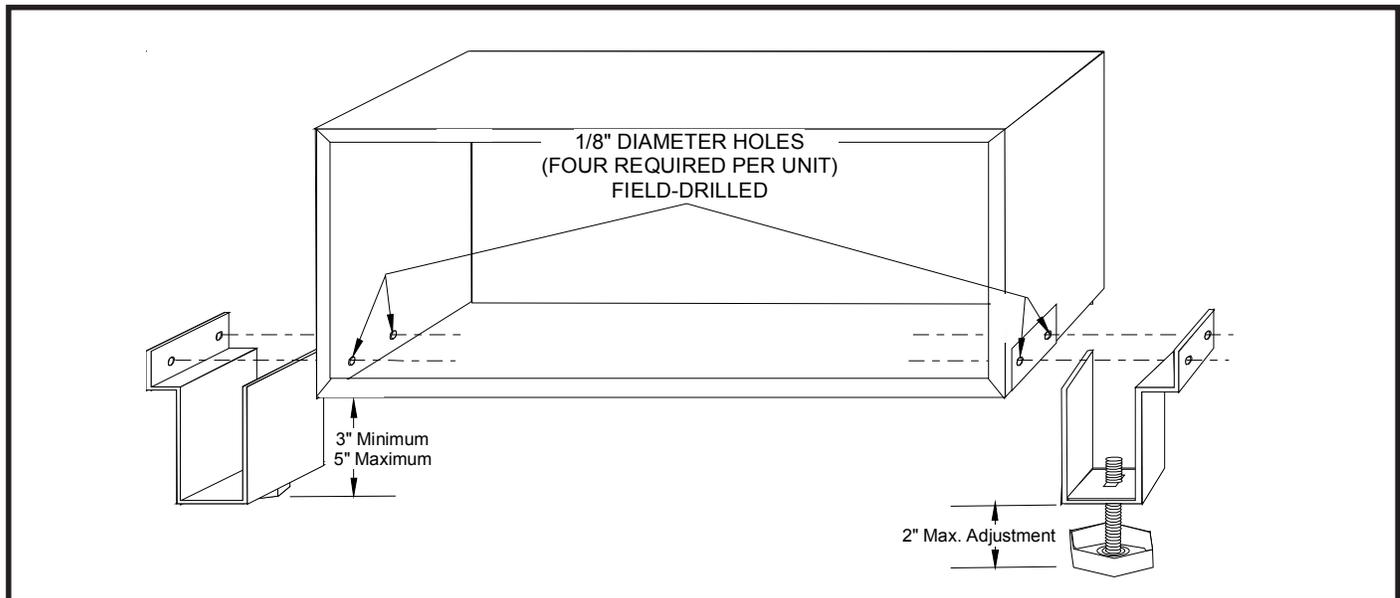

INSTALLATION CHECKLIST

The following is an abbreviated guide to leveling leg installation. Refer to the appropriate sections for more detailed information.

RECEIVING

- Compare kit identification number with sales order to ensure that the correct has been received.
- Inspect the leveling legs for shipping damage. File damage claims with the delivering carrier immediately.

Due to a policy of continual product improvement the right is reserved to change specifications and design without notice.

INSTALLATION

- Drill four 1/8-inch diameter holes in the wall sleeve, two on each side, using the leveling legs as a template. Caulk around the screws to prevent water leakage.
- Attach the legs to the wall sleeve, using the screws provided.
- Adjust the leveling legs to level the wall sleeve from side to side and provide a slight pitch to the outside (one-quarter bubble in the sight glass).

PTAC DIRECT SALES, INC.

185 S. Kimball Ave., Suite 130
Southlake, TX 76092

877.454.7822 (T)