



Installation instructions for your new

RAVRG2

Return air grille

Before you begin—Read these instructions completely and carefully.
IMPORTANT—OBSERVE ALL GOVERNING CODES AND ORDINANCES.

Note to Installer—Be sure to leave these instructions with the Consumer.

Note to Consumer—Keep these instructions with your Owner's Manual for future reference.

Tools Needed

- Ruler or tape measure
- Pencil
- Phillips head screwdriver
- Wood saw
- Level

Parts Needed

- 8 Mounting screws (mounting hole dimension $\frac{7}{32}$ ")
- 20" x 20" x 1" Filter


Install the return air grille

NOTE: The return air grille must be installed in an interior closet wall common to the unit.

1. Cut and frame a $20\frac{3}{8}$ " W x $20\frac{3}{8}$ " H opening in the closet wall panel.

NOTE: Use a level or suitable method to make sure the cutout is square and plumb. Install the grille frame in the orientation shown.

2. Remove the two screws from the grille and remove the grille from the frame.
3. Fit the grille frame into the cutout opening.
4. Secure the grille frame to the closet wall frame using 8 mounting screws (field supplied).
5. Install a 20" x 20" x 1" filter (field supplied) in the grille.
6. Install the grille into the frame and replace the two screws removed earlier.

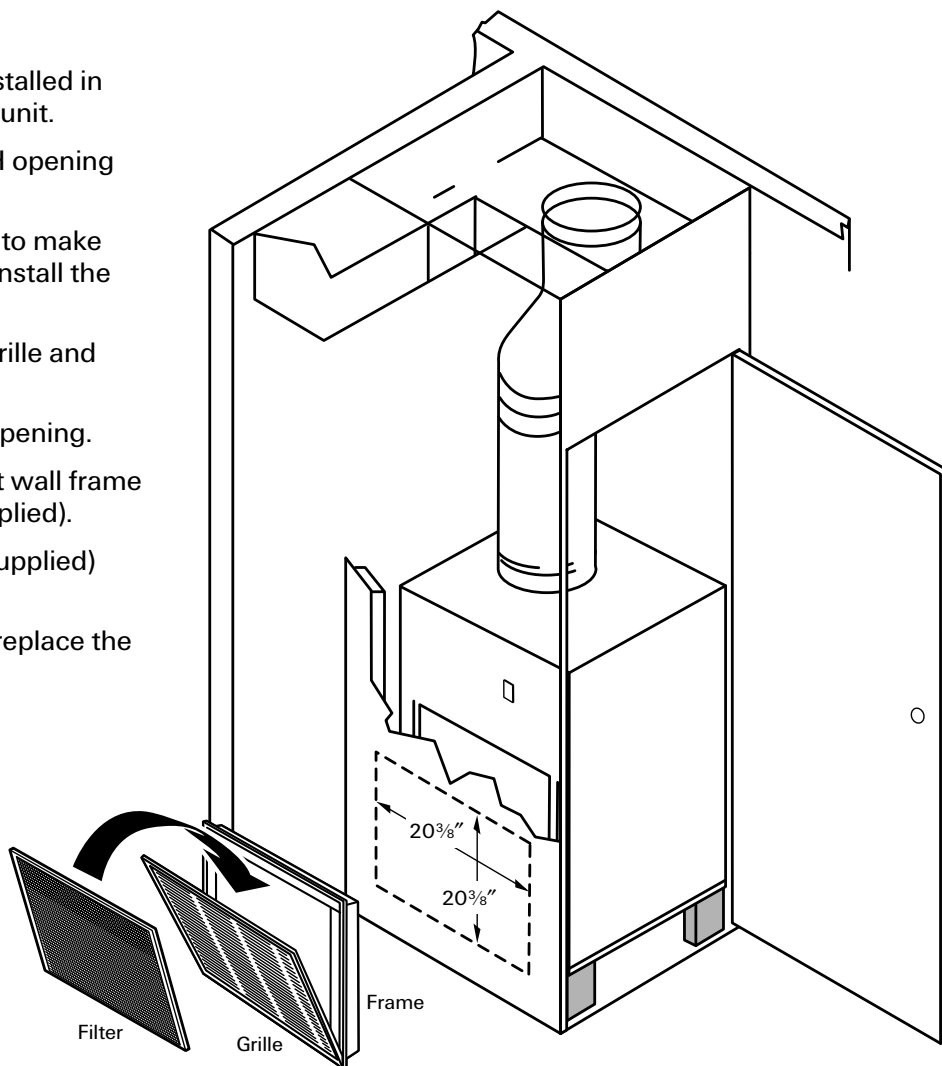

PTAC Direct Sales, Inc.
185 S. Kimball Ave. Suite 130
Southlake, TX 76092
877.454.7822 (T)